


Grab-It™ Cutout Fuse Tube Remover Operation & Maintenance Manual

C-00235 GRAB-IT (4-23-20)

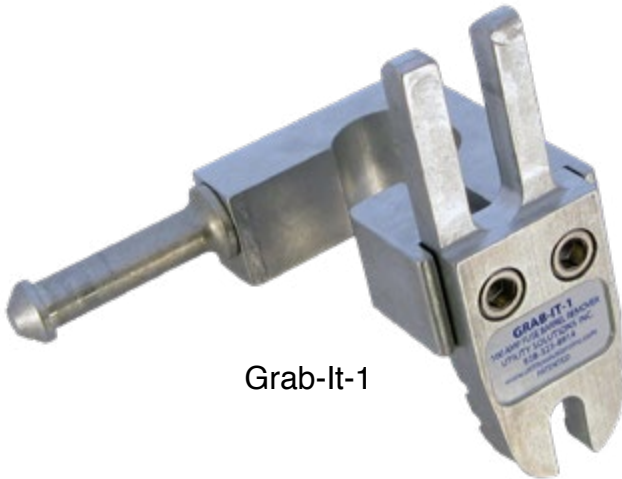

Grab-It-1



*F - Hi-Visibility
Flourescent Green



Grab-It-3



Grab-It-5

- GRAB-IT-1 100 AMP Cutout Fuse Tube Remover**
- GRAB-IT-2 100 & 200 AMP Cutout Fuse Tube Remover**
- GRAB-IT-3 100 AMP Cutout Fuse Tube Remover**
- GRAB-IT-5 Current Limiting (CL) Cutout Fuse Removal Tool**

STEP 1:

Slide the Grab-It™ Cutout Fuse Tube Remover from left to right inserting the fuse tube into the cradle.

STEP 2:

Slide the Grab-It™ Cutout Fuse Tube Remover up to the hinge of the fuse tube barrel such that the slot engages the hinge.

STEP 3:

Lift the fuse tube assembly from the cradle.
Simply reverse the steps for fuse tube installation.

